

User manual

(

Contents			page
Introduction			3
Operator safety			4
1	Ope	Operating instructions	
	1.1	Preliminary switch on	5
		1.1.2 Imaging display device connection	5
	1.2	Power on/off	6
	1.3	Display layout	7
	1.4	Scanning	8
		1.4.1 Standard operation	8
		1.4.2 Mode selection	9
		1.4.3 Gain and power adjustment	9
		1.4.4 Freeze image	9
	1.5	Battery life, metering and charging	10
2	Car	e & maintenance	11
	2.1	Axial and radial probe	11
	2.2	Duo-Scan 3 battery	12
	2.3	Duo-Scan 3 console	12
Technical specifications			13
Main service centres			14
Accessories			15







2



BCF Technology Ltd is a market leader in the development and production of "real time" ultrasound pregnancy scanners for most animal species. We have over 26 years experience of developing, manufacturing and the distribution and support of animal imaging equipment.

BCF, in consultation with leading experts in animal husbandry applications, have combined the best features of the Duo-Scan 2 with the latest state of the art technology. The result is **Duo-Scan 3**, an ultrasound scanner which is small, light, robust, portable and easy to work with.

The **Duo-Scan 3** is designed and manufactured in Scotland by:

BCF Technology Ltd 3 Tailend Court Starlaw Road Livingston, West Lothian EH54 8TE Scotland, UK

Telephone: +44 (0)1506 460023
Facsimile: +44 (0)1506 460045
Email: info@bcftechnology.com
Website: www.bcftechnology.com

As specialists in providing ultrasound imaging equipment for animal husbandry applications, we understand the importance of having reliable equipment. All BCF products are designed and manufactured to withstand the environments in which they are going to be used. However, should you experience any problems with your Duo-Scan 3, BCF Technology Service Engineers will be available to provide rapid service support and ensure optimum performance of your BCF system.

The Duo-Scan 3 has been designed to conform with the requirements of European Directive 89/336/ EEC relating to electromagnetic compatibility (EMC) and also 2002/95/EC relating to Reduction of Hazardous Substances (RoHS). The CE mark on the rear panel is a symbol of this conformance. If you require any further information regarding these directives please contact us directly.

Note: All BCF Technology products are to be used for animal applications only.





Operator safety

The Duo-Scan 3 is designed to operate only from a 12V DC source.

The use of a 12V lead acid battery ensures safety from electrical hazard.

When charging batteries, use only the BCF supplied charger. This charger is matched to the battery capacity and will ensure long life and continued safety. Higher charge rates from unsuitable chargers may lead to hazards from fire or battery leakage in addition to reducing battery life.

Although the Duo-Scan 3 runs from a low voltage source, dangerous voltages are generated within the unit. For this reason, no attempt should be made to disassemble the scanner. Should you require any assistance please contact a BCF Service Engineer.





1 Operating Instructions

1.1 PRELIMINARY SWITCH ON

Before connecting or disconnecting the probe, ensure that the Duo-Scan 3 power is switched off and that the probe connector is free from dirt.

Connect the probe to the front connector marked 'G'.

Rotate the probe connector until the notches on the probe and scanner align, and then screw the retaining ring clockwise to lock the connector in position.

1.1.2 Imaging display device connection

The Duo-Scan 3 accessories allow the ultrasound image to be viewed on the display headset, monitor or wrist-mounted display options.

Before connecting an imaging display device be sure the connector is free from dirt.

Displays are connected to the 'Display' connector 'H'.

Make sure the connector is correctly oriented before pushing home and the external threaded metal lock ring is engaged carefully before tightening gently.

If you are using a wireless monitor you do not need to connect it to the console, and the display connector cover plug may be left in place. If the monitor uses a video cable, follow the instructions above.







1.2 POWER ON/OFF

Duo-Scan 3 is designed to operate only from a 12V DC battery pack.

Use only the BCF supplied battery pack.

Ensure the charged battery pack is securely latched to the Duo-Scan 3.

Press and hold the 'POWER' button



on the front panel until the system beeps.

The green 'DC POWER' light located above the power button should be illuminated and the scanner will now perform a system initialisation.

If the probe is connected, it will start to rotate. If the imaging display device is connected, its screen will be illuminated.

The sector scan and settings will be displayed on the screen.

The buzzer will sound twice; the second indicates that the system initialisation is complete and the system is ready to function.

If the supply voltage is too low (less than 9 volts) the system will display a 'Low Battery' message for 6 seconds before powering down.


To switch the scanner off, press and hold the power button



until the scanner shuts down.



1.3 DISPLAY LAYOUT

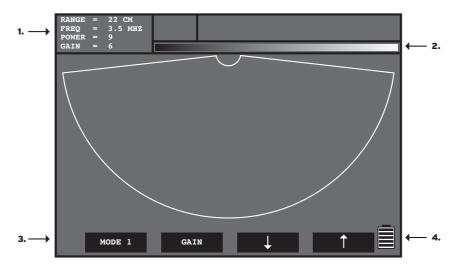

- 1. The current range, operating frequency, power and gain settings are displayed at the top left hand corner of the screen.
- 2. The grey bar contains 32 of the 256 shades of grey. This helps with the adjustment of brightness and contrast and gives a comparison of grey intensity for the ultrasound picture.
- 3. The current function of the 'soft' keys is displayed along the bottom of the screen.

The menu disappears after approximately 6 seconds, leaving only the scan, voltage and battery capacity displayed.

To switch the menu back on, press any button on the scanner.

4. A battery capacity and voltage reading are displayed in the lower corners of the display.







1.4 SCANNING

1.4.1 Standard operation

All functions of the console are set using the front panel keys shown below.







Switches between Power or Gain



Power or Gain down



Power or Gain up



Short press freezes image Long press switches on & off







1.4.2 Mode selection

The Duo-Scan 3 comes with 8 default Preset modes for cattle pregnancy scanning as listed below:

Mode 1: Range 16cm, Frequency 5MHz, Foetal Ageing Circles On

Mode 2: Range 16cm, Frequency 5MHz, Foetal Ageing Circles Off

Mode 3: Range 19cm, Frequency 3.5MHz, Foetal Ageing Circles On

Mode 4: Range 19cm, Frequency 3.5MHz, Foetal Ageing Circles Off

Mode 5: Range 22cm, Frequency 3.5MHz, Foetal Ageing Circles On

Mode 6: Range 22cm, Frequency 3.5MHz, Foetal Ageing Circles Off

Mode 7: Range 25cm, Frequency 3.5MHz, Foetal Ageing Circles On

Mode 8: Range 25cm, Frequency 3.5MHz, Foetal Ageing Circles Off

These modes are the default factory settings.

Your scanner will be preloaded with the settings requested when ordered so the information provided above may vary.

The shorter ranges are for use in early pregnancy and for improved detail, the longer ranges for late pregnancy and better penetration.

As the range is altered, the speed of the probe varies to provide the best quality image. The smaller the range, the faster the probe rotates.

The scanner always powers on in Mode 1.

To scroll through preset modes press



1.4.3 Gain and power adjustment

Both ultrasound gain and power can be adjusted by the user, the menu along the bottom of the screen will display either "Gain" or "Power" in the 2nd box.

To switch between gain and power, press the Select button.



To adjust the Gain or Power values, use the Up and Down keys on the front panel.





9

1.4.4 Freeze image

To freeze the image press the power button briefly.



Pressing this button briefly once more returns the scanner to live imaging.





1.5 BATTERY LIFE, METERING AND CHARGING

The Duo-Scan 3 runs for approximately 5 hours on a fully charged battery, the current charge level of the battery is displayed in the lower right of the display



Each bar on the meter represents approximately 1 hour of run time.

The battery meter will flash when there is less than 5 minutes of power remaining.

The current battery voltage is displayed in the lower left of the display, this is primarily for factory use.

Charging

The battery must first be removed from the Duo-Scan 3 before charging.

Attach the battery to the charger by securing both latches.

Once the battery is connected the charger may be plugged in and switched on.

An indication of battery condition may be observed on the charger when the Push button is pressed and the unit will show the state of battery condition during charging - "Low", "Good" or "Full".

The battery will require at least eight hours charging from fully discharged, but may be left connected for longer without damage.







The Duo-Scan 3 was designed for reliability in the animal husbandry marketplace. BCF engineers and their appointed agents are available to provide rapid service assistance to ensure optimum performance of BCF systems. However there is no substitute for careful usage.

As specialists in providing ultrasound imaging equipment for animal husbandry applications, we understand the importance of having reliable equipment. All BCF products are designed and manufactured to withstand the environments in which they are going to be used. However, should you experience any problems with your Duo-Scan 3, BCF Service Engineers will be available to provide rapid service support and ensure optimum performance of your BCF system.

The Duo-Scan 3 is designed to be robust and reliable and to withstand the environment in which it will be used. Should you experience any problems, BCF Service Engineers are available to provide rapid service support and ensure optimum performance.

2.1 AXIAL AND RADIAL PROBE

- · Always clean the probe immediately after use and before any contamination can dry in. The probe head can be immersed in warm (not hot) water to clean.
- The probe connector carries critical pulses from the console to the probe head and back. It is imperative to keep these contacts clean and free of contamination. To maintain a good contact, clean the connectors using methylated spirits (or equivalent alcohol) and a small toothbrush to gain access to the contacts, flush with alcohol and leave to drain hanging downwards.
- Never force a connector if it will not go together easily. Debris may collect between the pins and can be carefully removed with a small screwdriver.
- Be very careful to avoid anything getting into the gold plated connector inserts, this may cause damage and some of these are expensive to replace.
- Do not knock or scrape the transducer window, this may cause the window to burst. Do not push against the probe window, the sealing may be damaged or fluid may be forced out of the internal expansion tube. If a window or its seal leaks then the probe must be returned to BCF. Further use of the probe with a window leakage will further damage other internal parts of the probe due to dirt from outside contaminating the internal gears.
- Do not forcibly bend or pull the cable connecting the probe to the module.
- Examine the probe regularly for any damage, especially the window. The chamber behind the window is filled with a silicon fluid and it is normal for a small bubble, about 1mm diameter, to be present. A large bubble or signs of leaking fluid should be referred to a BCF Service Engineer.
- Any other problems or maintenance queries should be referred to a BCF Service Engineer.







2.2 DUO-SCAN 3 BATTERY

The battery unit is of sealed lead acid type and will give many hundreds of recharge cycles if the supplied charger is used. While the battery is in good condition and is fully charged, it will run the Duo-Scan 3 for approximately three hours.

Electrical connection to the battery is through the latches on either side of the battery. Battery output is protected with a resetting fuse but care should be taken to prevent short circuiting between latches.

The battery unit may be cleaned by wiping down with a damp cloth.

Dry the battery unit out at the earliest opportunity if it gets wet.

Warning: The battery unit must not be stored damp - severe corrosion will result.

2.3 DUO-SCAN 3 CONSOLE

Keeping all the connectors clean and dry is especially important, use methylated spirits (or
equivalent alcohol) and a small toothbrush to gain access to the contacts, flush with alcohol
and leave to drain/dry.

The outer case and PVC carrying case can be cleaned using a cloth, warm soapy water.

The front panel can be cleaned with a cleaning agent such as isopropyl alcohol cleaning cloths.

Note: If using soap and water on the front panel ensure that no water enters any of the connectors.

- Examine all cables (power and probe) on a weekly basis for signs of damage such as cracks or splits. Pay extra attention close to connectors and joints. If damage is found it is imperative to have repairs carried out immediately to avoid further damage or risk of electric shock.
- Any other problems or maintenance queries should be referred to a BCF Service Engineer.

To ensure optimum performance we recommend that the equipment is serviced once a year by a BCF Service Engineer. The Service Engineer will thoroughly check the equipment, ensuring that electrical safety is being maintained, and advise of any work which appears to be necessary.





V

Technical specifications

SPECIFICATIONS

- Operation/Image Modes: Standard B mode
- · Grey Shades: 256 different shades
- Power/Battery: Up to 5 hours in continuous use
- · 12V battery attached to the unit
- Physical Dimensions (mm): 280 (D) x 195 (W) x 95 (H)
- Weight: 3Kg (with battery)
- · Application preset modes: Up to 8 different preset modes

PROBES

- 3.5 and 5.0 MHz radial scan probe 170 degree only. Length 16"
- 3.5 MHz axial scan probe 85 degree and 170 degree
- 5.0 MHz axial scan probe 85 degree and 170 degree
- 3.5 and 5.0 MHz split dual axial scan probe 170 degree only





Main service centres

BCF Technology Ltd

3 Tailend Court

Starlaw Road

Livingston

Scotland, UK

EH54 8TE

Tel: +44 (0)1506 460023 Fax: +44 (0)1506 460045

Email: service@bcftechnology.com Web: www.bcftechnology.com

BCF Technology USA

2625 Highway 14

West Suite K, Rochester

Minnesota 55901

USA

Tel: +1-800-210-9665

Fax: +1-507-529-8205

Email: usa@bcftechnology.com

Web: www.bcftechnology.com

BCF Ultrasound Australasia Pty Ltd

Unit 10

56 Norcal Road

Nunawading 3131

Melbourne

Victoria

Australia

Tel: +61 3 9894 8980

Fax: +61 3 9894 8991

Email: service@bcfultrasound.com

Web: www.bcfultrasound.com





•

Accessories



Rectal Probe



Axial Probe



Batteries and charger



Wrist Display



Goggles



15

Monitor



Video Cable



Carry Sack









www.bcftechnology.com